


Installation Guide

Warning Module for continuous monitoring of Field bus wiring state

148R9638


148R9638

Warning Module

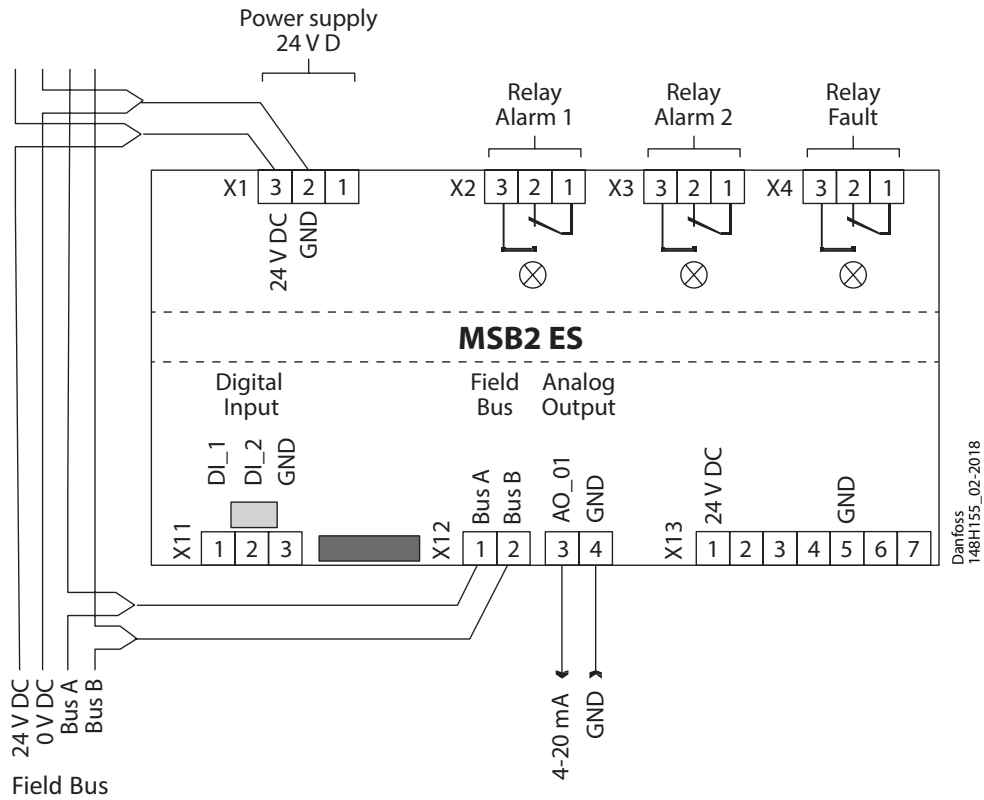

Danfoss
148H155_02-2018

Field bus wiring example

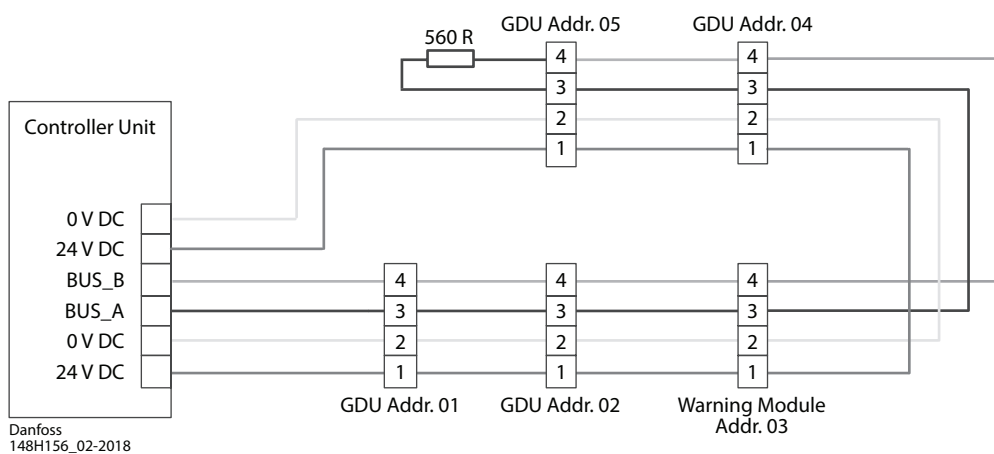

Danfoss
148H156_02-2018

Further documentation:

